

SASEBO-GIII Quick Start Guide

[Version 1.0]

April 25, 2013

Research Institute for Secure Systems,
National Institute of Advanced Industrial Science and Technology

1. Equipment preparation

Before setting up the SASEBO-GIII instrumental environment and running its test program, have the following equipment available:

(1) SASEBO-GIII

The SASEBO-GIII package contains the SASEBO-GIII (a parts-mounted print circuit board)

(2) USB cable

The SASEBO-GIII uses a USB cable to communicate and supply board power with the host PC.

(3) Host PC

Have a middle-range Windows XP/Vista/7 PC with USB ports as the host computer of SASEBO-GIII.

(4) Software (See Section 3)


The instrumental environment requires Microsoft .Net Framework 4.0 and Xilinx ISE (WebPACK or Foundation, whichever works).

(5) FPGA configuration cable

Have either of the Xilinx Platform Cable USB or Platform Cable USB II available. This cable is used to program the flash ROMs connected to the FPGAs.

2. Connections

Connect between SASEBO-GIII and the host PC with the USB cable.

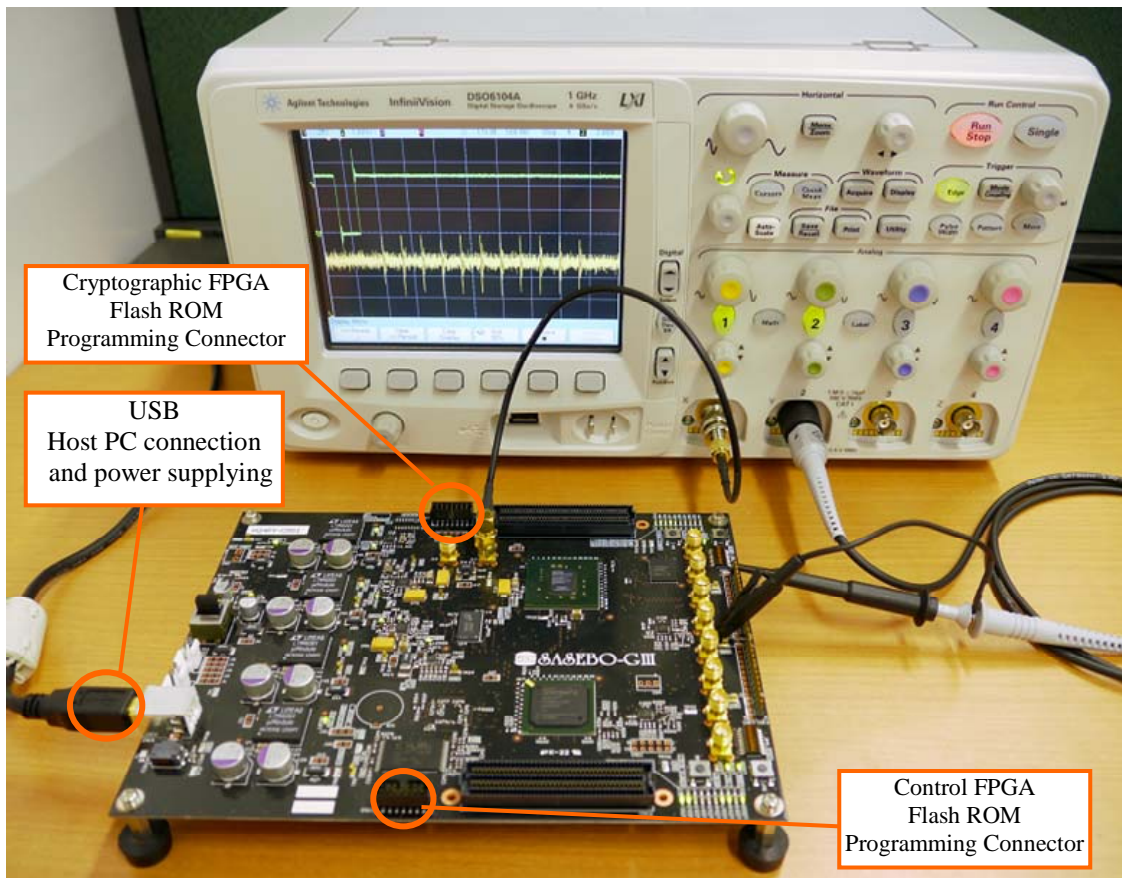

3. Software installation

Download and install the following software:

- (1) Software for testing AES module on SASEBO-GIII: SASEBO_G_Checker

<http://www.risec.aist.go.jp/project/sasebo/>

(via introduction page in English)

- (2) Microsoft .Net Framework 4.0

<http://www.microsoft.com/en-us/download/details.aspx?id=17851>

(English version)

<http://www.microsoft.com/ja-jp/download/details.aspx?id=17851>

(Japanese version)

- (3) Xilinx ISE WebPACK

<http://www.xilinx.com/products/design-tools/ise-design-suite/ise-webpack.htm>

(English version)

<http://japan.xilinx.com/products/design-tools/ise-design-suite/ise-webpack.html>


(Japanese version)

- (4) FTDI FT_Prog software

<http://www.ftdichip.com/Support/Utilities.htm>

4. Setting up SASEBO-GIII

- DIP switch and jumper settings for the SASEBO-GIII

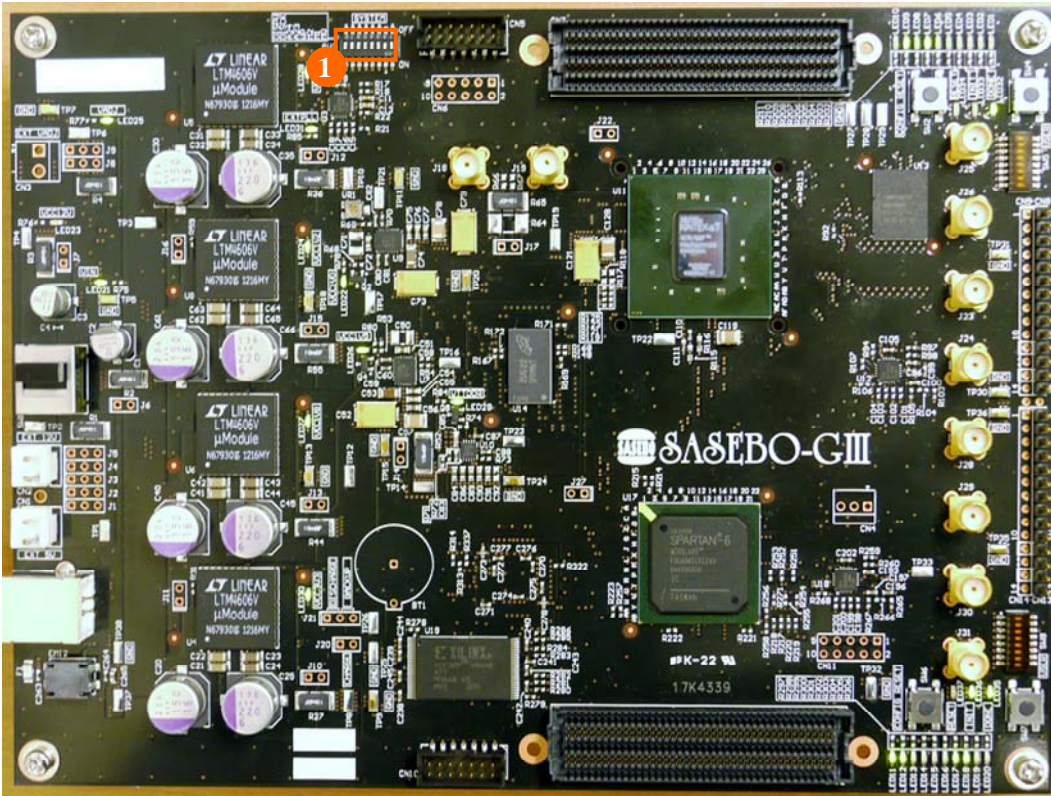

- (1) SW3



- FTDI USB configuration

To reprogram the configuration ROM of FT2232H (U21), attach the USB cable and use FT_Prog software. For configuration, use the provided the template file `sasebo_giii.xml`.

- FPGA configuration

To reprogram the flash ROM (XCF32P, U19) for the control FPGA (Spartan-6), attach the configuration cable to CN10. For configuration, use the provided MCS file `sasebo_giii_ctrl.mcs`.


Reprogram the flash ROM (28F128P30B, U13) for the cryptographic FPGA (Kintex-7) with the provided MCS file `sasebo_giii_aes.mcs` as well. Connect the configuration cable to CN5.

To configure the FPGA immediately after reprogramming of the flash ROM, cycle the power.

6. Power Consumption Measurement

To carry out measurement of power consumption of the board, have an oscilloscope, a passive probe, and a SMA-BNC cable.

➤ Example measurement for SASEBO-GIII

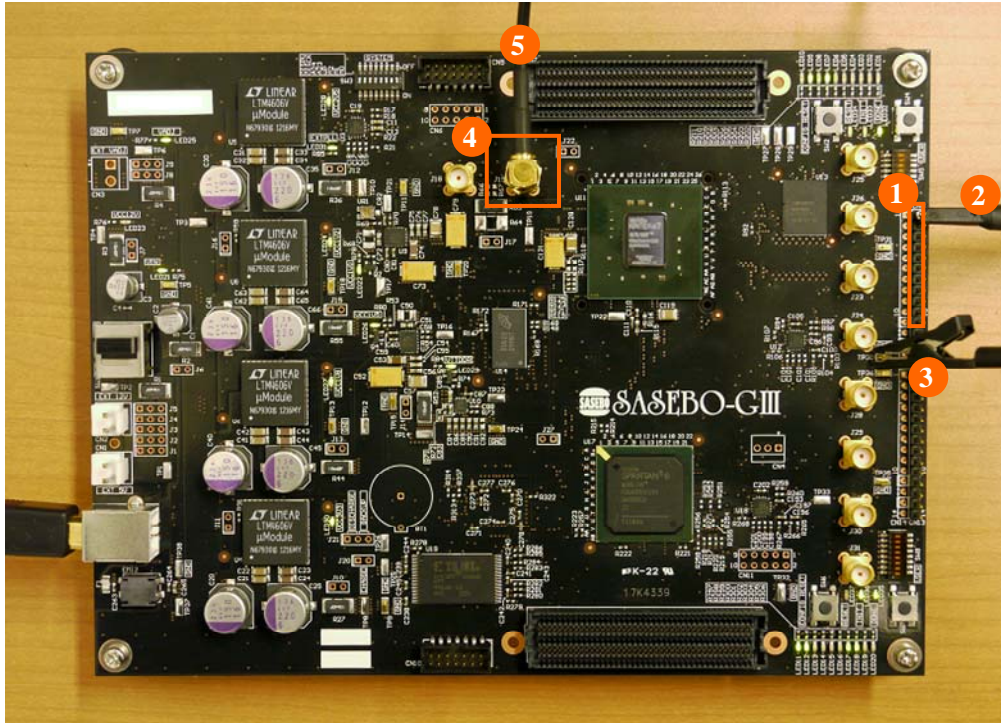

Grab the trigger signal on pin 1 of CN8(1) with the probe connected to channel 2(2). The ground wire of the probe should be connected to TP30(3). Take the power consumption waveform from J19(4) via the channel 1 SMA-BNC 50 ohms cable(5).

For channel 1, set the vertical scale to 2 mV/div, and the offset to 1.05 V/div. For channel 2, set the vertical scale to 1.0 V/div and the offset to 0 V. Set the trigger source to channel 2 and the triggering mode to negative edge.



A power consumption waveform like the one in the above picture is expected.

The SASEBO-GIII board was developed by AIST undertaking projects sponsored by JST (Japan Science and Technology Agency)

1. The copyright of this product belongs to the National Institute of Advanced Industrial Science and Technology (AIST).
2. Copying this document and product, in whole or in part, is prohibited without written permission from the copyholders.
3. Only personal or research use of this document and product is granted. Any other use of this document and product is not allowed without written permission from the copyholders.
4. The specifications of this product are subject to revision without notice.

Technical inquiries:

National Institute of Advanced Industrial Science and Technology (AIST)

AIST Tsukuba Central 2 Room 4408

1-1, Umezono 1-Chome Tsukuba-shi, Ibaraki 305-8568, Japan

TEL: +81-29-861-2984

FAX: +81-29-861-5285